

<b>Title:</b>	<b>Temperature Alarm</b>	<b>ID:</b>	
		0232	
<b>Date in:</b>	<b>Response:</b>	<b>Model:</b>	<b>Author:</b>
2004-12-23	2004-12-23	-	CMa

## Q:

I would like to know if there are any alarms or way to use the audible alarms on the Liconic incubator to signal an out of temperature event? How would we set those values?

Currently we set the temperature and humidity but if the temp or humidity is out of specification then there is no audible alarm.

## A:

We have an alarm implemented in our ActiveX driver. The simplest way is to implement it in our program. If needed we would implement an alarm function in the fw of the incubator. In this case you would have to specify the tolerances / trigger threshold.